



CHAPTER 1	<i>Translight Software: Manual</i>	5
	Licence	6
	Pre-defined Systems	7
	Setting up for the first time.	9
	<i>Running the code.</i>	9
	Modifications	12
	Graphical User Interface, G.U.I.	13
	<i>Summary / Start Menu</i>	14
	<i>Structure Menu</i>	15
	Features	15
	Discretisation mesh used to represent structure	15
	Lattice constant & cell size	15
	Chunk / Cell Magnification	16
	<i>Controls Menu</i>	17
	Dielectric Constants.	17
	Frequency Range.	17
	Feature / Cell Control.	18
	Coating / Sintering.	18
	<i>Incidence Menu</i>	19
	<i>Advanced / Help Menu</i>	20
	Input File Generation / Reload	20
	Miscellaneous	20
	<i>Templates Menu</i>	21
	<i>Licence Menu</i>	22
	Defining the structure through the control file.	23
	DEBUG: Debugging Option.	23
	AVS: Advanced Visual Systems File Output (AVS)	23
	READONCE: Reads parameters once.	23
	DEFECTS: Defects.	23
	Features: ANYBAR, ANYROTBAR, ANYCYL, ANYSPHERE	24
	BUILDBLOCK: Builds a large representative matrix.	24
	XMAG, YMAG, ZMAG Expansion factors.	24
	COEFF: Transmission Coefficient / Band Structure Calculation	24
	XSIZE, YSIZE, ZSIZE Global Discretisation Mesh	25
	ISUB: Sub Mesh Size	25
	EMACH: Machine Accuracy	25
	CIKVAL: Filter on Eigen Values	25
	Dielectric Constant related parameters.	25
	Controlling the plane wave incidence.	26
	Miscellaneous Parameters	26
	FRNOP: Filling Ratio Number of Points.	26
	ASPECT: Cell aspect ratio.	26
	DEFECTR/A: Controlling the defects.	27
	ROVERA: Controlling the element size.	27
	COATING	27
	SINTERING	27
	Defining the crystal.	28
	<i>Terminology</i>	28
	Using BLOCKS	29
	<i>Additional Added Code Capabilities</i>	31
	Coatings	31
	Sintering	32



	Output Files	33
CHAPTER 2	<i>Tutorial 1:</i>	
	<i>Omni-directional reflectance from a Bragg stack using Dmitry Chigrin's structure.</i>	35
	Selecting Chigrin's Stack	36
	<i>Mesh to Represent Structure.</i>	36
	<i>Structure Features.</i>	37
	<i>Cell Repetitions.</i>	37
	<i>Lattice Constant / Cell Size.</i>	38
	<i>VRML Output.</i>	38
	Setting up the materials and feature properties.	39
	<i>Dielectric Constants.</i>	39
	<i>Frequency Range.</i>	40
	<i>Feature / Cell Control.</i>	40
	<i>Coating / Sintering.</i>	40
	Normal Incidence Calculation.	41
	Controlling / Scanning the Incidence Angle.	42
	<i>Points worth mentioning:</i>	44
	<i>Interim conclusion.</i>	45
	Examining the Bragg stack embedded in air.	46
	<i>Controlling the incidence angle in degrees.</i>	46
	<i>Generating the TE / TM transmission response.</i>	47
	<i>Point of Interest</i>	48
	<i>TE / TM Transmission response in degrees.</i>	49
	<i>TE / TM Transmission response in k-vector.</i>	49
	Defining your own Bragg stack.	50
	<i>Examining the template files.</i>	51
	How to use a template.	54
	<i>Check list for problems with using templates.</i>	56
	<i>Changing the template file to introduce a defect into the lattice.</i>	57
	Template File Differences.	58
	Example cell.dat file for template use for bars.	58
	Example cell.dat file for template use for cylinders and spheres.	58
CHAPTER 3	<i>Code Updates & Enhanced Capability</i>	61
	Updates to Translight Code	62
	<i>Band Structure Calculation</i>	62
	<i>Coating Activation</i>	62
	<i>Mesh Building & On Screen Report Progress Visual Feedback</i>	62
	<i>Calculation Time Estimation</i>	63
	<i>Negative Angular Incidence Control</i>	64
	<i>Rotated Bars</i>	64
	<i>Bug Fixes & Elementary Updates</i>	65
	Boundary condition & dissimilar discretisation mesh implementation.	66



<i>Modelled vs Actual TE Transmission Response.</i>	68
UNIX Code Issues	69
<i>Capabilities</i>	69
<i>Version Control / Directory Structure</i>	70
<i>Drag & Drop Interfacing</i>	71
<i>Using Templates in the UNIX version</i>	71
<i>Pre-defined Systems</i>	72

